

Blue Star

All

AC

Error Code

List

PDF

<https://pdffile.co.in/>

<i>Error Code</i>	<i>Fault</i>
EE	ODU EEPROM ERROR
E6	COMMUNICATION ERROR
LC	COMPRESSOR STARTUP FAILURE
LC	COMPRESSOR OUT OF STEP FAULT
P7	IPM ERROR
F5	ODU DISCHARGE TEMP.SENSOR ERROR
F4	ODU COIL TEMP.SENSOR ERROR
F3	AMBIENT TEMP.SENSOR ERROR
L3	OUTDOOR DC FAN FAULT

E5	AC INPUT OVER CURRENT PROTECTION
P5	COMPRESSOR PHASE CURRENT PROTECTION
PH	AC OVERVOLTAGE & UNDERVOLTAGE PROTECTION
P4	DC BUS-BAR HIGH VOLTAGE & LOW VOLTAGE PROTECTION
P8	IPM OVER-HIGH TEMPERATURE PROTECTION
E4	DISCHARGE TEMP-HIGH ERROR
E2	IDU COIL FROZEN PROTECTION
E1	ODU COIL MEDIUM-HIGH ERROR
E0	IDU EEPROM ERROR
H6	IDU FAN MOTOR ERROR

E8	ZERO CROSSING ERROR
F2	IDU COIL TEMP SENSOR ERROR
F1	INDOOR ROOM TEMPERATURE SENSOR ERROR
EC	REFRIGERANT LEAK DETECTION
L1	DRIVE PHASE VOLTAGE OVERLOAD PROTECTION
L2	DRIVE PHASE VOLTAGE OVER-LOW PROTECTION
P3	DRIVE PHASE CURRENT OVERLOAD FAULT
L4	PHASE CURRENT SAMPLING ABNORMAL